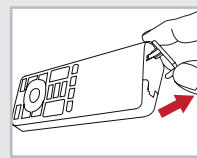LG
Life's Good

Quick Setup Guide
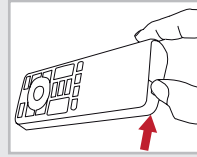
GA7900 series

P/N:MBM63660453 (REV01-1302)

REMOTE CONTROL
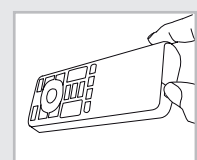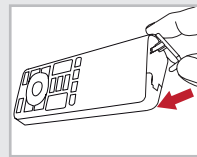
Inserting batteries

1. Open the battery cover as shown below.

2. Insert batteries into the remote control.

3. Close the battery cover as shown below.
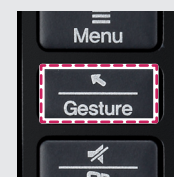
QWERTY Side - Front

(POWER)
Turn the TV on or off.

HOME
Access the homescreen.

Navigation Buttons
(up/down/left/right)
Move focus

BACK
Move to previous or superior step.

Trick play keys
rewind, play, pause, fast forward

INPUT
Selects input list.

VOICE
Searching by voice.

OK
Select item by pushing key.
Wheel
Spin the wheel up/down to scroll up/down.
GUIDE
Access the EPG on connected set-top box.
(Available only on Live TV)

VOL
Adjust the volume level.
CH
Change TV channels.
Menu
Call option pop-up for activating app.
Activate/deactivate the pointer
Gesture
Zoom in/out(Press and Hold)
Mute all sounds.
Change between 2D and 3D mode.(Press and Hold)

QWERTY Side - Back

ESC
Cancel state or command
Tab
Move focus to the next step
Shift
Combination key for upper letter
Back
Move to previous or superior step.

EXT PWR (Fn+Z)
Turn on/off external device
AMP PWR (Fn+X)
Turn on/off amplifier

Delete text
Enter
Finish text input

Fn
Combination key with other keys
Ctrl
Combination key with other keys

Space
Enter a space

(Fn+)/(Fn+)
Zoom in/out
AMP VOL - (Fn+)/AMP VOL + (Fn+)
Volume up/down on audio receiver

TV
Activate TV player app
PIP
Activate/Deactivate PIP
INFO
Show channel information (available only on Live TV)
DVR
Enter DVR menu

How to pair the remote control

Press the Pointer button to pair the remote control.

How to use the zoom in/out gestures

1. Press and hold the Gesture button for 2 seconds.
2. While holding the Gesture button, draw a circle in a clockwise direction to zoom in or counter-clockwise direction to zoom out.
(This feature is only available while using the Web.)

For more information

Refer to manual or go to www.lg.com

CONNECTIONS

Wired

Wireless

Router

Cable/Satellite Box

Other devices
Home theater/ Blu-ray player/ ...

HDMI or Component..

IR Blaster cable

Place the IR Blaster so that the infrared transmitter points to the remote sensor of the Cable/Satellite Box.

1

2

3

1 Connecting to a network
Connect the TV to a router with a LAN cable.
Or, connect with Wi-Fi by accessing Network Setup in the initial Setup Wizard. For seamless internet streaming LG recommends a stable 4Mbps broadband speed and 1.5Mbps as a minimum.

2 Connecting the cable/satellite box
Use the appropriate cable that is provided from your cable or satellite provide to connect the cable/satellite box to the TV. Place the IR Blaster near the remote sensor.

3 Connect other devices
Connect the Audio amplifier and other devices to the TV if necessary.

IR BLASTER SETTINGS

The Setup Wizard will begin when you turn on the TV for the first time. You can connect the LG remote to a cable/satellite box by following the steps shown below.
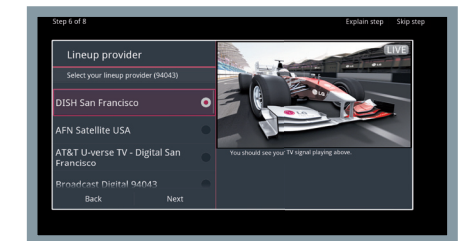
You can see the screen shown above to start the set up routine. There, select **(A)** to access the IR blaster settings.

Select the correct port that is connected to the cable/satellite box. You should see a TV signal once the correct port is selected.
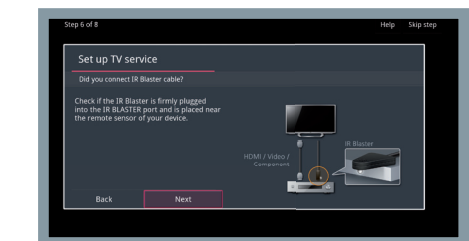
Select your connected device type.

Select your lineup provider from the list. A TV signal should appear once you pick the correct provider.

Select the correct cable/satellite box manufacturer.

Check if the IR Blaster is firmly plugged into the IR Blaster port and is placed near the remote sensor of your device as shown above.

The TV will generate a test code to see if the remote is properly working with the cable/satellite box. Press the CH up and down to check the code. If the Channel doesn't change, then select [**No, try next code**] to repeat this step until you find right code.
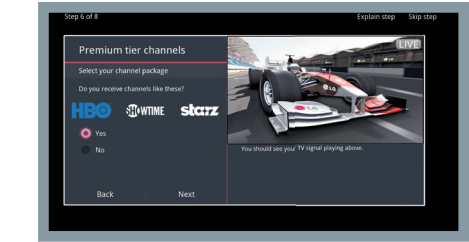
The TV will generate a list of premium channels. Select [**Yes**] if you receive any of these channels.
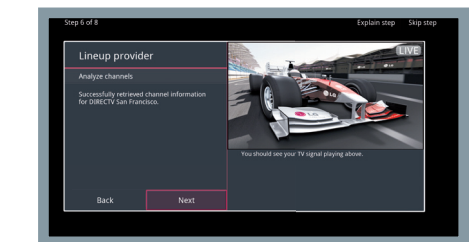
Your channels are analyzed.
If it is finished successfully. Select [**Next**].

Your LG remote is now set up to your cable/satellite box. You can now access the channel guide or connected set-top box with your remote.

HOME

Live TV

Input List & Settings

Next page

Channel description

Launcher Bar
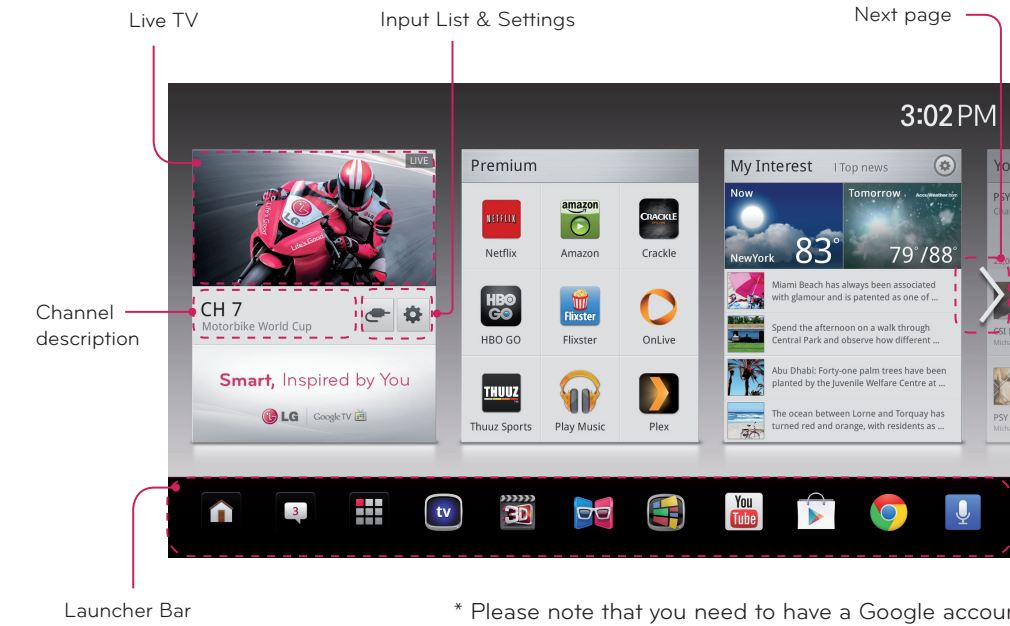
* Please note that you need to have a Google account to setup the TV. It makes it more convenient to use Google's services and automatically restores your personal apps after a software update.

PRIMETIME QUICK GUIDE

The new quick guide makes it easy to find live TV content well organized in categories (Movies, Drama, Sports, etc.). Press the guide key anytime to bring up the best live TV content to you immediately.